


# TXL<sup>®</sup>WEC-G LCD DIGITAL ALARM CLOCK

## OPERATING INSTRUCTIONS

Please read instructions carefully and store them in a safe place for future reference

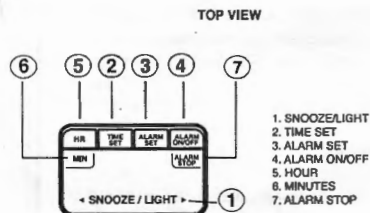

## FEATURES:

1. Large easy to read LCD display
2. Ascending alarm volume
3. Repeat snooze alarm
4. Bright colored backlight w/5second delay
5. Soft Rubberised Case

## TO INSTALL AND REPLACE BATTERIES-

The LCD clock uses 2xAA batteries.

To install and replace the batteries, please follow the steps below

1. Remove the battery compartment cover.
2. Insert batteries observing the correct polarity (see marking inside battery compartment)
3. Replace the battery compartment cover.

Note: Do not mix new and old batteries. Do not mix alkaline, standard (carbon-Zinc) or rechargeable (nickel cadmium) batteries

## TO SET THE TIME

1. Press and hold the Time Set button.
2. Press the Hour button to advance the display to the correct hour.
3. Press the Minute button to advance the display to the correct minute
4. Be careful to set the time to AM or PM correctly. When PM time is set, the letters "PM" will appear on display.
5. Release the Time Set button once the time setting is completed.

## TO SET THE ALARM TIME

1. Press and hold the Alarm Set button.
2. Press the Hour button to advance the display to the correct hour.
3. Press the Minute button to advance the display to the correct minute
4. Be careful to set the time to AM or PM correctly.
5. Release the Alarm Set button once the alarm setting is completed.

## DISPOSAL OF YOUR CLOCK OR OLD BATTERIES

As the consumer, you are legally obliged to dispose of all used batteries in an environmentally responsible manner. Please check your local ordinances regarding battery and electronics disposal. Disposal in the household waste is prohibited.\* Most old batteries can be disposed of free of charge to at collection points in your community or anywhere where batteries/rechargeable batteries are sold. Please help protect the environment.

## TO TURN THE ALARM ON OR OFF

Press the Alarm ON/OFF button to turn alarm ON and off. The alarm symbol (☞) & (☛) will be visible on the display when the alarm is activated. The alarm will sound for 60 seconds at the elected time.

## TO USE THE DISPLAY LIGHT

When the alarm sounds. Press the Snooze/light button. The alarm will stop and sound again after 5-8 minutes.

## TO USE THE DISPLAY LIGHT

Press the Snooze/light button to light up the display in the dark.

Note: Frequent use of the light will drain the batteries more quickly.

## MAINTENANCE

The batteries should be replaced if the display or alarm becomes weak or dysfunctional. Store the clock without batteries when not in use. A soft cloth or a paper towel may be used to clean your clock. Do not use any corrosive cleaner or chemical solutions on the clock.

## CAUTION

Dangers from leakage or malfunction are possible if the batteries are incorrectly replaced. Replace only with the same or equivalent type of battery. Please refer to the engraved battery marks inside the battery compartment for the correct battery polarity (+) and (-).